


Arm Assembly Step 2

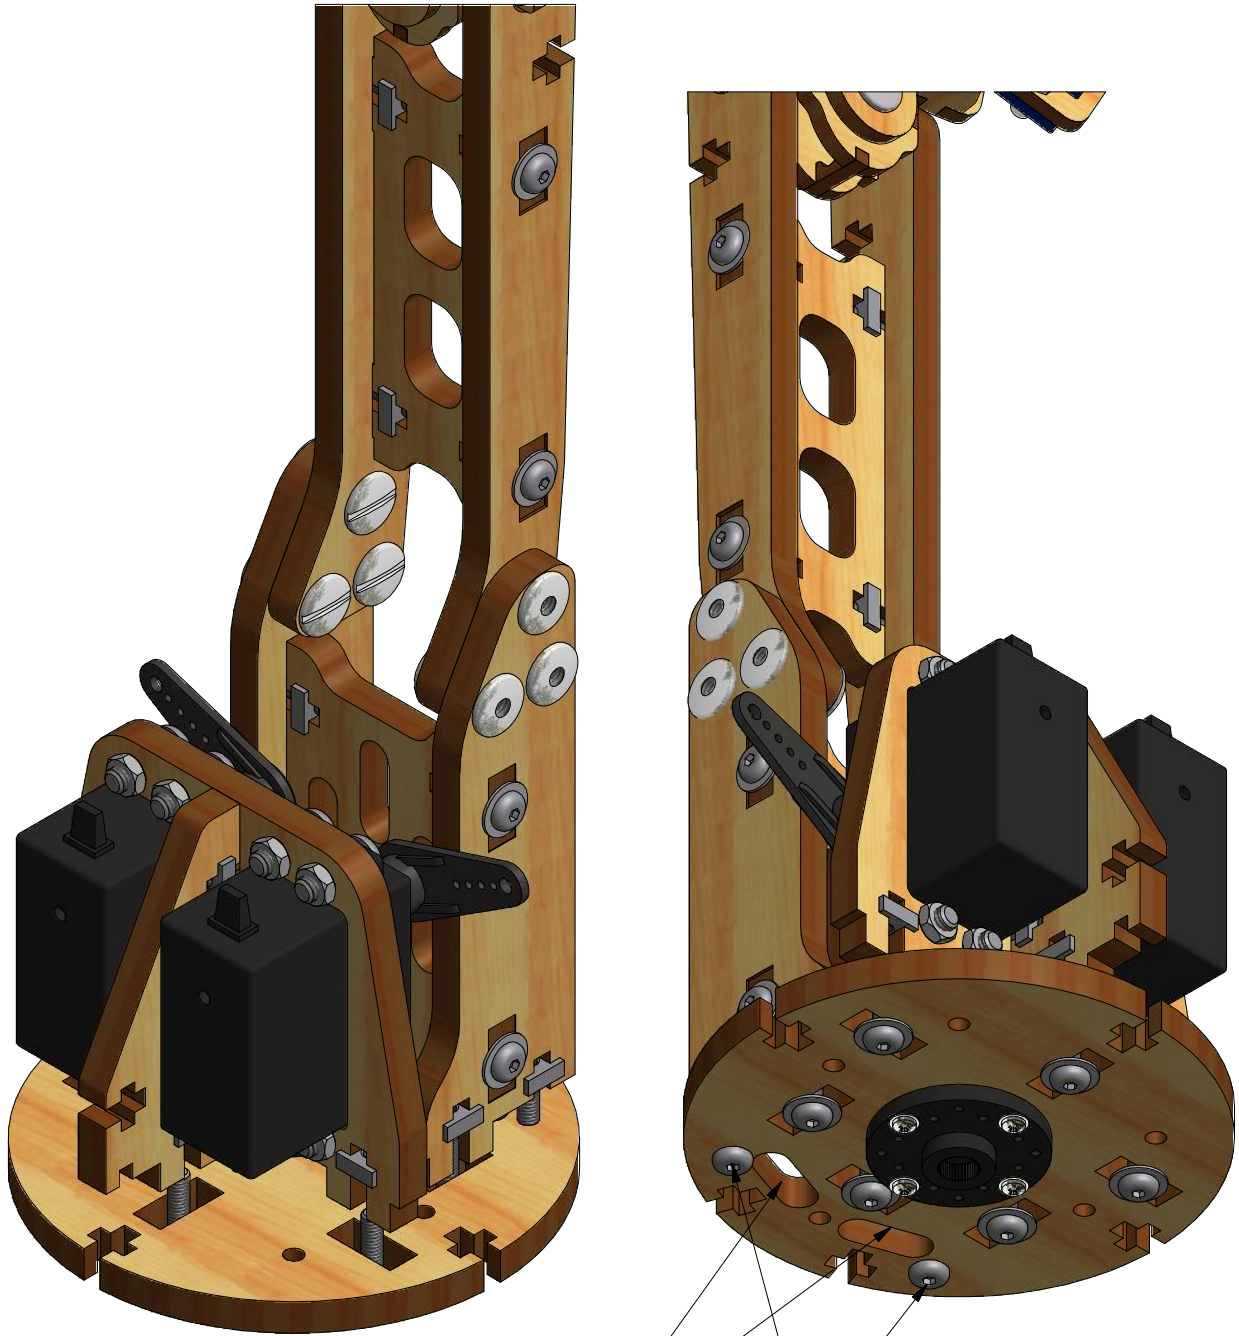

After adding extensions, pass an equal number of servo wires through each slot.

Rear 2 screws that pass through holes do not get washers.