

Arm Assembly Step 3

2


1

B

B

A

A

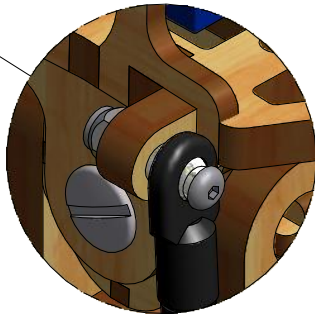

Use 4-40 button-heads
and lock-nuts to secure
upper and lower link ends.

Start with upper back skin screws then lower back screws.
Work each side around base adding screws as you go.
Leave them loose until they are all in.

2

1