



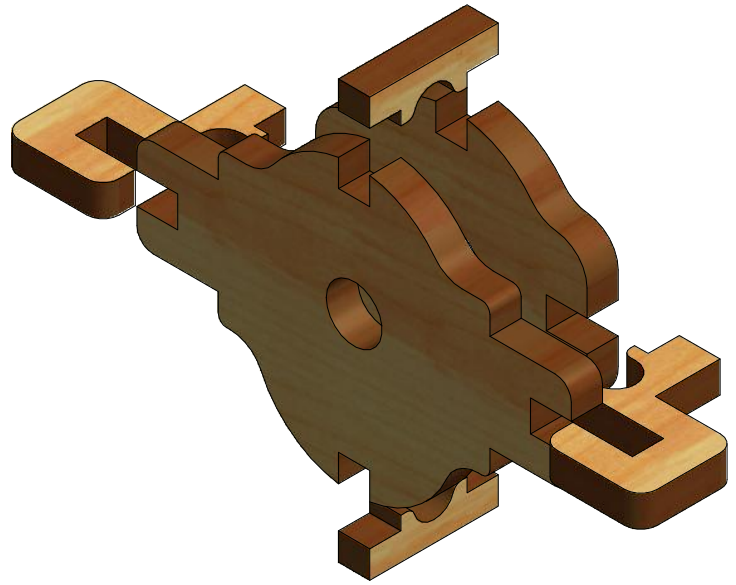


Wrist Assembly
Scale 2:1

B

B

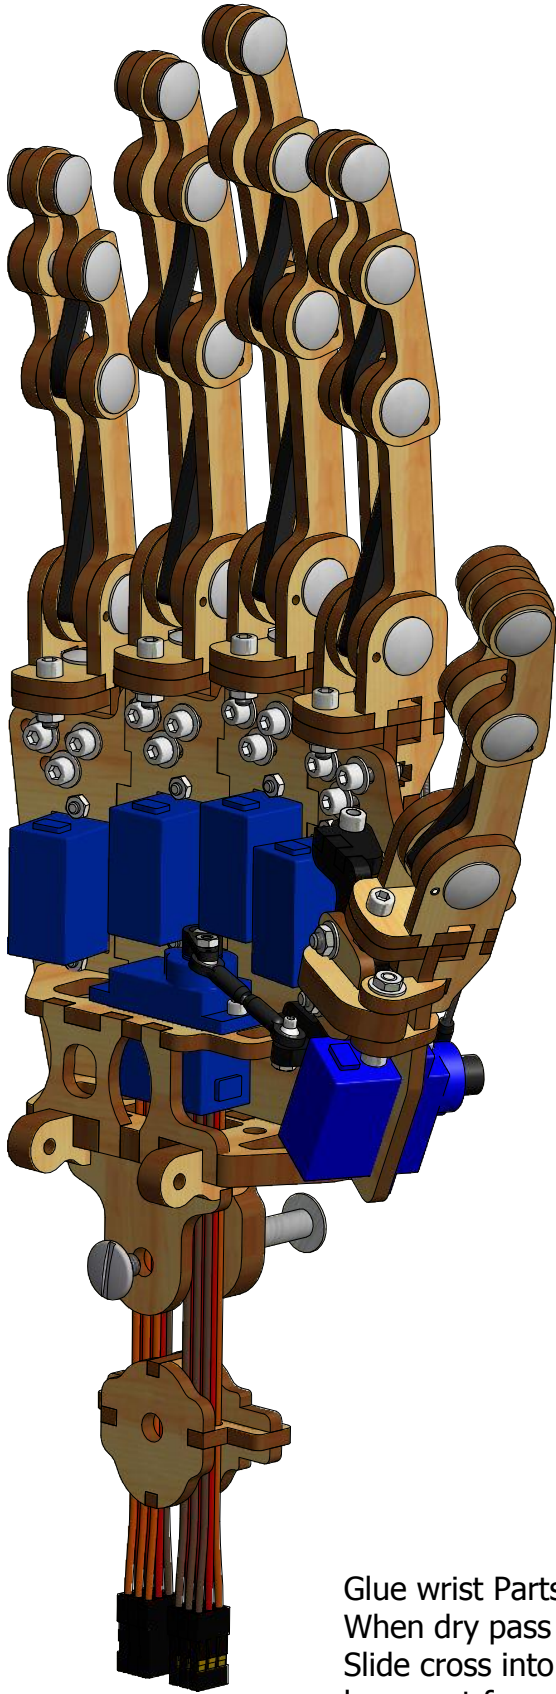

Back Side

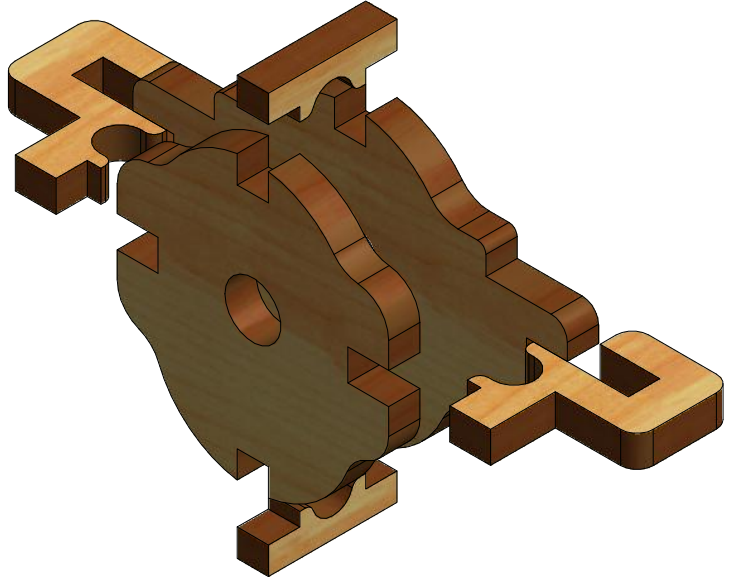

Palm Side

A

A

Glue wrist Parts together as shown.
When dry pass 3 servo wires through each side of the cross.
Slide cross into the clevis of the palm assembly and insert
long post from the back.
Be sure to keep the wires on the appropriate sides of the post.

